

Simon SIEVE

1) Check before use:

- **Take off wristbands, rings and similar!**
- power switch (on wall) is turned on
- bags are secured to each of the 3 outlets
- start motor and fill with flour
- adjust feeding plate (black knobs) every now and then

2) To stop:

- wait until all of the flour went through
- turn off motor
- **turn off power switch (on wall)**